



Edition 07/09

Index

1. General precautions	page 2
2. Transmitters with digital output	page 2
Standard installation	page 2
Electrical connections (series MD / WD / KD / I / IJ)	page 2
3. Transmitters with amplified analog output	page 3
Standard installation	page 3
Electrical connections (series TK / TKDA / TPSA / TPSADA / TSA)	page 3
Electrical connections (series TPFADA / TPHA)	page 4
Electrical connections (series M / W / K / I)	page 5
4. Transducers with non-amplified analog output	page 6
Standard installation	page 6
Electrical connections (series M / W / K / I)	page 6
Electrical connections (series TPS)	page 7
Electrical connections (series TPF / TPH)	page 7
5. Protection for outdoor installations of analog sensors	page 8
6. Standard reference	page 9

1. General Precautions

The system must be used only in accordance with the required protection level.

The sensor must be protected against accidental knocks and used in accordance with the instrument's ambient characteristics and performance levels.

The sensors must be powered with non-distributed networks and always at lengths of less than 30 mt.

In case of outdoor installations, follow the instructions in paragraph 5.

2. Transmitters with digital output


Transducers: Series MD / WD / KD / I / IJ

Outputs: CANopen DP404

Installation notes

- The transducer must be grounded (normally through the machine body or equipment it is installed on).
- Use a shielded cable only. The braiding must be connected to the case of the 5-pin connector. On instrument/PLC side, we advise you connect the braiding without power supply (0V GND).
- To prevent interference, separate the power cables from the signal cables.



Standard installation (recommended)

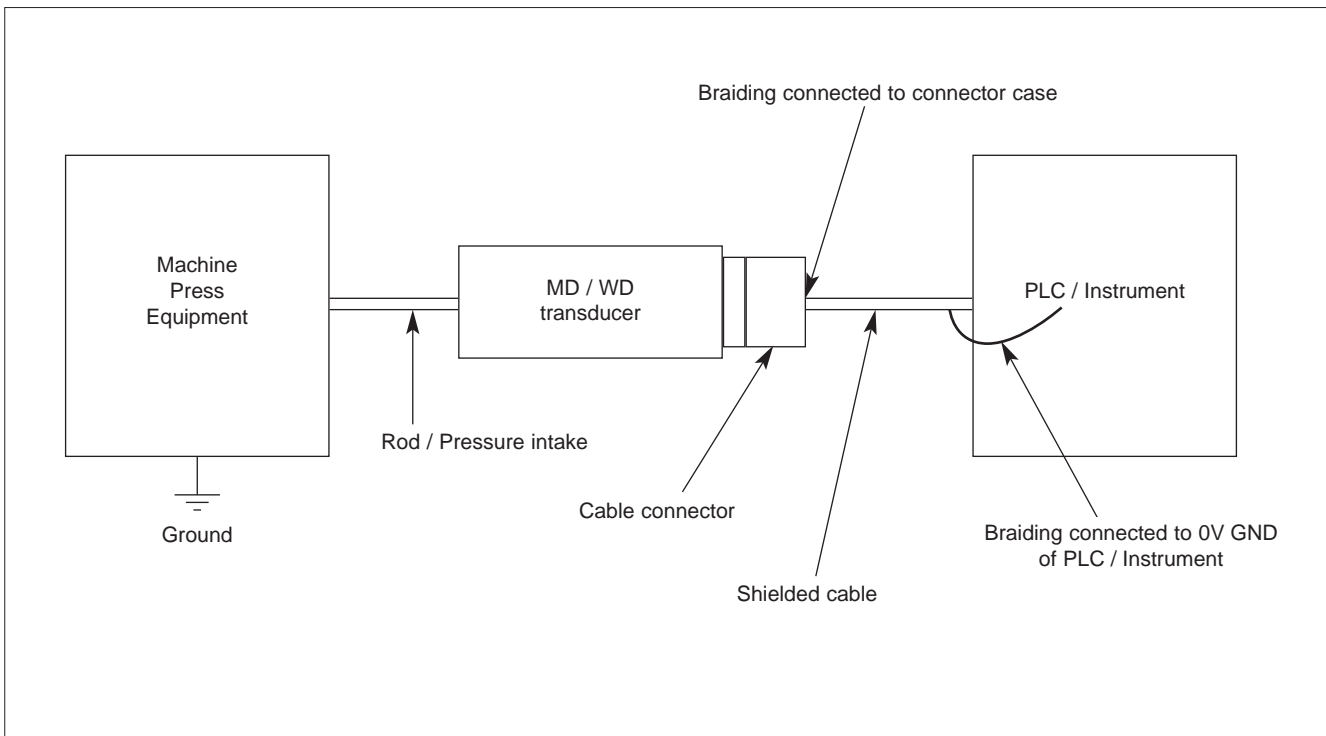

Electrical connections

Series MD / WD / KD / I / IJ

CAN BUS DP404 digital output

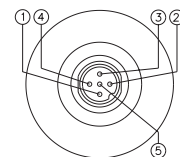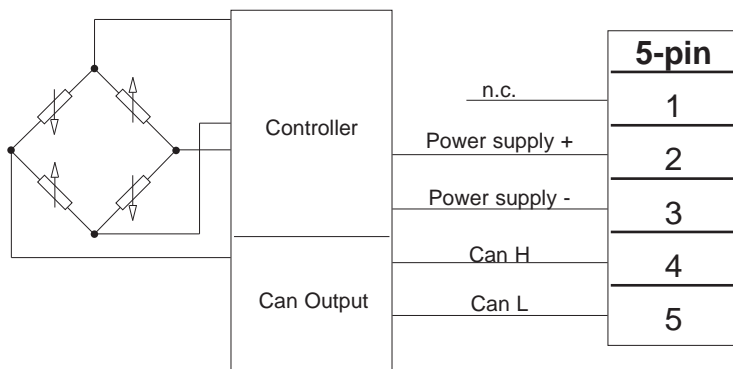

M12 DIN EN 50044 5-pin connector

3. Transmitters with amplified analog output


Transducers: Series M / Series K / Series I / TK / TKDA / TPSA / TPSADA / TSA

Outputs: 0...10V, 0...5V, 0,1...10,1V, 1V, 0,1...5V, 1V, 4...20mA, ecc...
mV/V

Installation notes

- The transducer must be grounded (normally through the machine body or equipment it is installed on).
- Use a shielded cable only. The braiding must be connected to the connector case. The braiding on instrument / PLC side must be left floating.
- To prevent interference, separate the power cables from the signal cables


Standard installation (recommended)

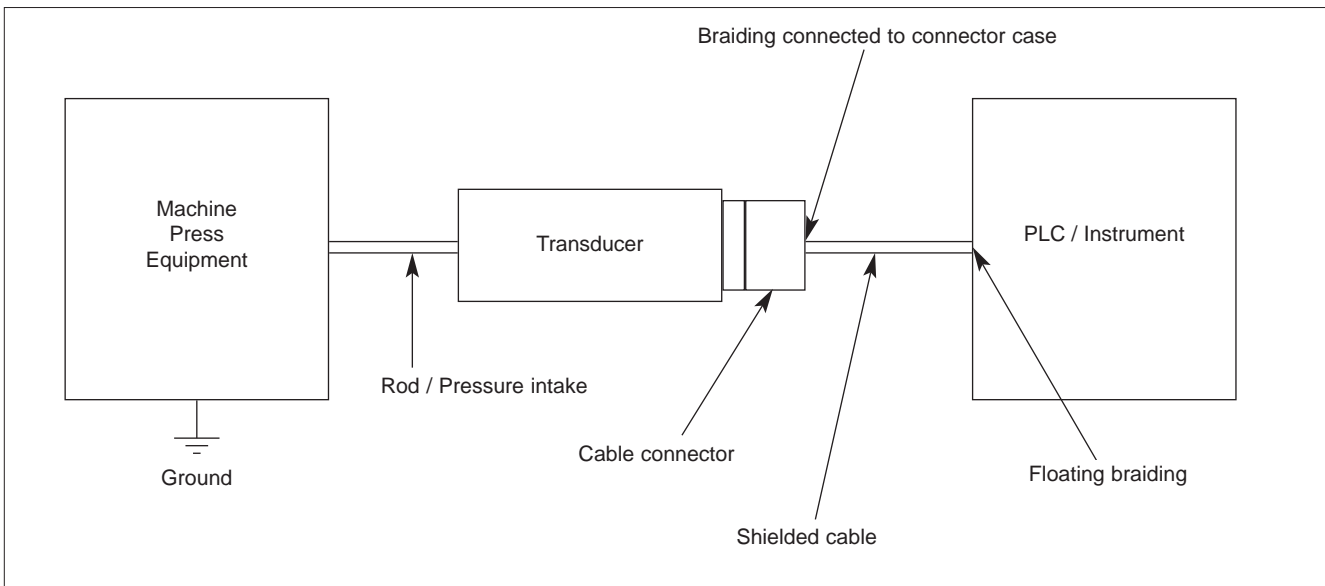


Electrical connections

Series TK / TKDA / TPSA / TPSADA / TSA


Current amplified output (mod. E)

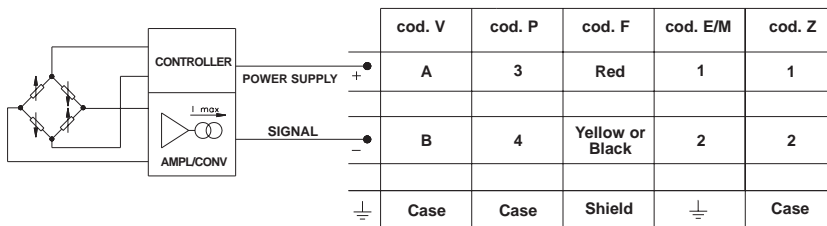


LOAD DIAGRAM (Current output)

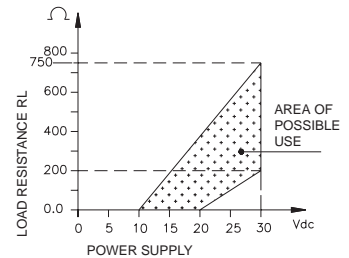

Voltage amplified output (mod. B/C/M/N/P/Q/R)

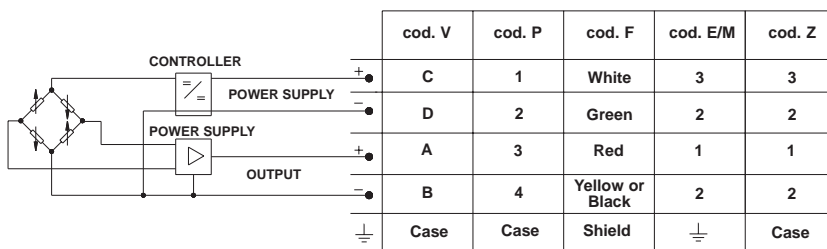


P - 7-pole connector

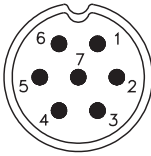


Male connector 09-127-09-07
Protection IP67

V - 6-pole connector

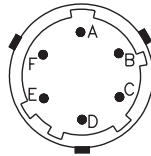


Male connector VPT02A10-6PT2
Protection IP66

F - 2-pole cable

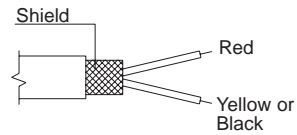


Shielded cable 2x0,25 - 2m. (output E)
Protection IP65

**Z - 4-pole male connector
M12 x 1**

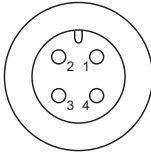


4-pole series 713 male connector
Protection IP67

**E - 4-pole solenoid connector
M - 4-pole microsolonoid connector**

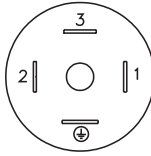

Solenoid DIN 43650A - ISO4400
Protection IP65
Microsolonoid DIN 43650C - ISO4400
Protection IP65


F - 4-pole cable

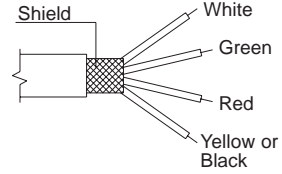

Shielded cable 4x0,25 - 2m
Protection IP65


Series TPFADA / TPHA

Output amplified in current (mod. E)

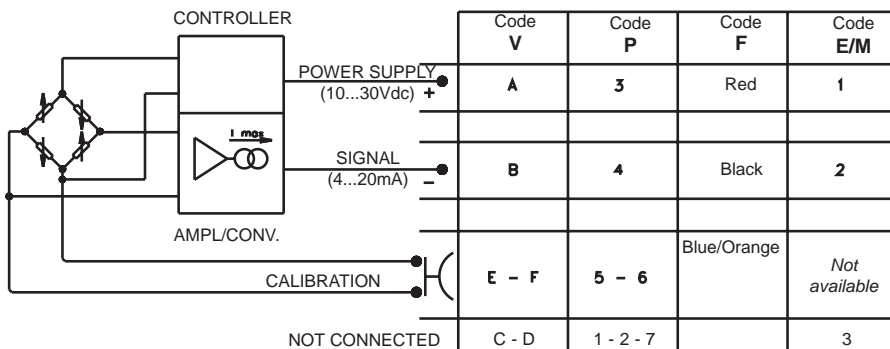


The cable sheathing is connected to the transducer body

**LOAD DIAGRAM
(Current output)**

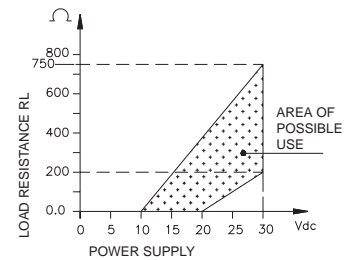


Output amplified in voltage (mod. B/C/M/N/P/Q/R)

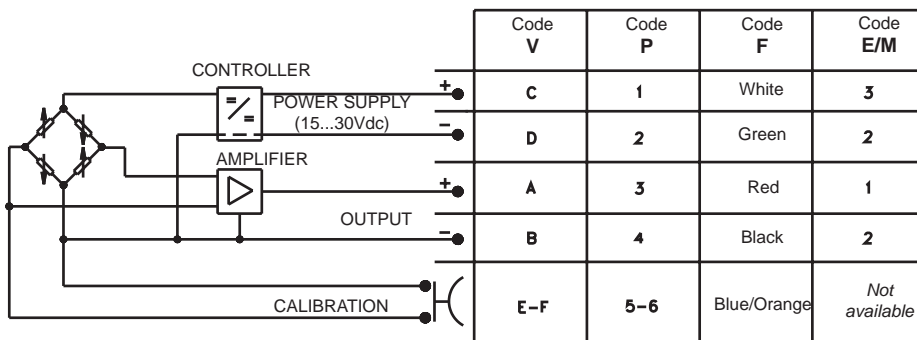


The cable sheathing is connected to the transducer body

P - 7-pole connector

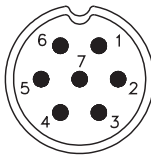


Male connector 09-127-09-07

V - 6-pole connector

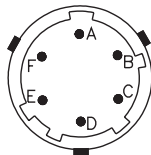


Male connector VPT02A10-6PT2

**E - 4-pole connector solenoid
M - 4-pole connector microsolonoid**

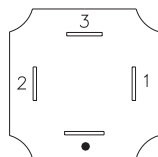


E - Solenoid 400 DIN
46350A-ISO 4400
M - Microsolonoid 400 DIN
46350B-ISO 4400

F - 4-pole cable

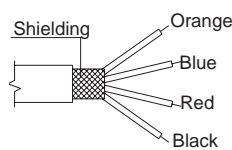


F - Shielded cable 4 x 0,25 - 1m
(for output code E)

F - 6-pole cable

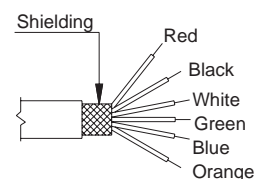

F - Shielded cable 6 x 0,25 - 1m.

Current output (4...20mA, 2 wires)

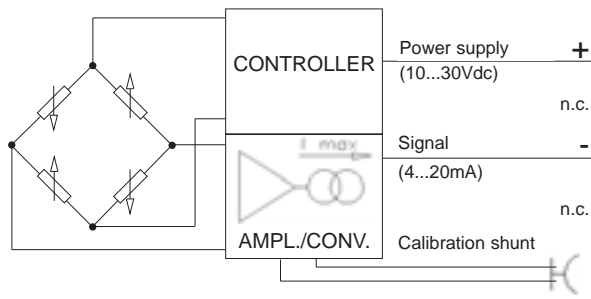


MAGNETIC AUTOZERO

	6-pin	8-pin
Power supply +	A	B
n.c.	C	A
Signal -	B	D
n.c.	D	C
Calibration shunt	E - F	E - F
n.c.		G - H

EXTERNAL AUTOZERO


	6-pin	8-pin
Power supply +	A	B
n.c.	C	A
Signal -	B	D
n.c.	D	C
Autozero	E - F	E - F
n.c.		G - H

LOAD DIAGRAM (Current output)

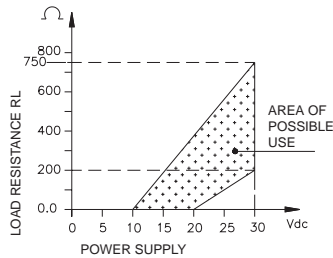

Shield drain wire is tied to connector via cable clamp

Voltage output (M, N, B, C)
Power supply 15..30Vdc

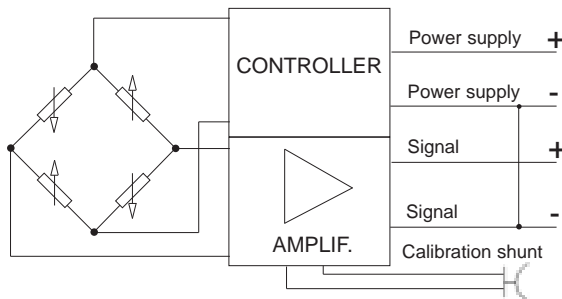

MAGNETIC AUTOZERO

6-pin	
Power supply +	C
Power supply -	D
Signal +	A
Signal -	B
Calibration shunt	E - F

EXTERNAL AUTOZERO


6-pin	
Power supply +	C
Power supply -	D
Signal +	A
Signal -	B
Autozero	E - F

Shield drain wire is tied to connector via cable clamp

Voltage output (H, L)
Power supply -15..+15Vdc (*)

(*) The Pin B of the connector must be connected to the common of the ± 15Vdc supply

8-pin connector

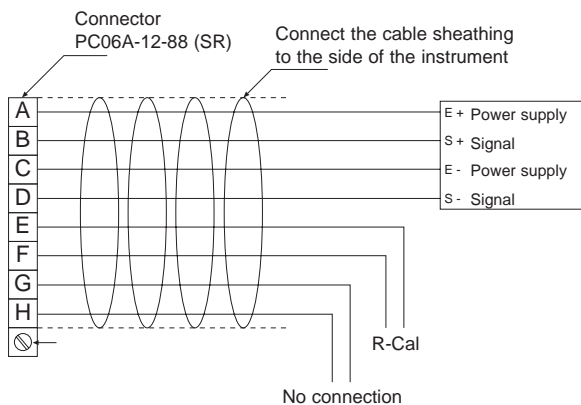


Magnetic Autozero version

- A = Excitation + (white)
- B = Signal + (red)
- C = Excitation - (green)
- D = Signal - (black)
- E = R-Cal (blue)
- F = R-Cal (brown)
- G = no connection
- H = no connection

External Autozero version

- A = Excitation + (white)
- B = Signal + (red)
- C = Excitation - (green)
- D = Signal - (black)
- E = Autozero (blue)
- F = Autozero (brown)
- G = no connection
- H = no connection

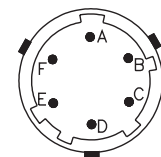

6-pin connector VPT07RA10-6PT2 (PT02A-10-6P)



8-pin connector PC02E-12-8P Bendix

4. Transducers with non-amplified analog output


Transducers: Series M / Series W / Series K / Series I / TPS / TPF / TPH

Output: mV/V

Installation notes

- The transducer must be grounded (normally through the machine body or equipment it is installed on).
- Use a shielded cable only. The braiding on connector side must be left floating. The braiding on instrument / PLC side must be connected to the power supply GND.
- To prevent interference, separate the power cables from the signal cables


Standard installation (recommended)

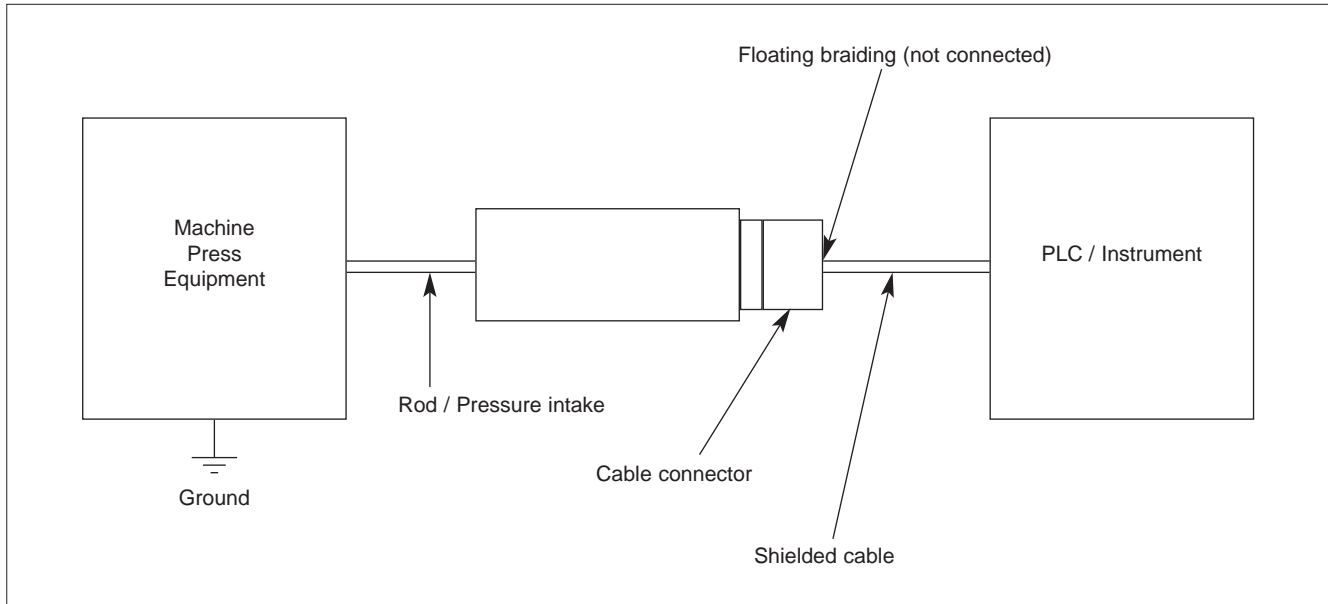


Electrical connections

Series M / W / K / I


mV/V output

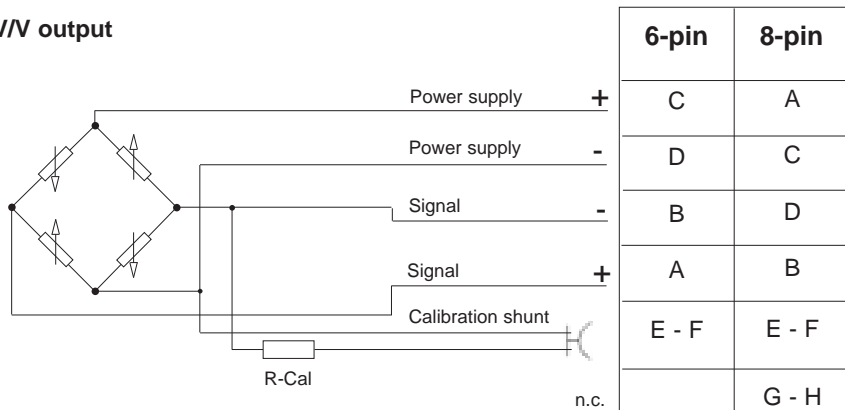

Connect the cable sheathing to the side of the instrument

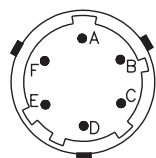


6-pin connector
VPT07RA10-6PT2
(PT02A-10-6P)

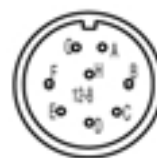

8-pin connector
PC02E-12-8P Bendix

Series TPS


mV/V output

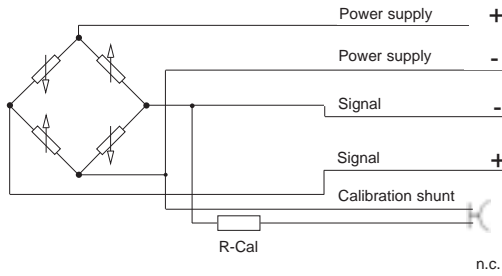

Code V	Code P	Code F	Code E/M	Code Z
C	1	White	3	1
D	2	Green	$\underline{\underline{\text{---}}}$	2
B	4	Black or Yellow	2	4
A	3	Red	1	3
E - F	5 - 6	Blue/ Orange or Violet	Not available	Not available
	7			


Cable shield connected to transducer body

P - 7-pole connector

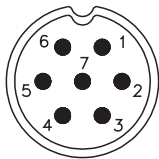


Male connector 09-127-09-07
Protection IP67

V - 6-pole connector

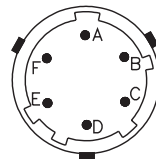


Male connector VPT02A10-6PT2
Protection IP66

Z - 4-pole M12 x 1 male connector

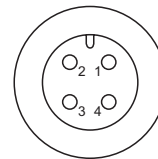

Male connector 4 pole series 713
Protection IP67


**E - 4-pole solenoid connector
M - 4-pole microsolenoid connector**

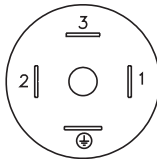

Solenoid DIN 43650A - ISO4400
Microsolenoid DIN 43650C - ISO4400

Protection IP65
Protection IP65


F - 6-pole cable

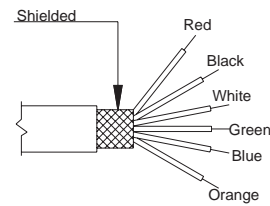

F - Shielded cable 6 x 0,25 - 1m.

Series TPF / TPH


mV/V output

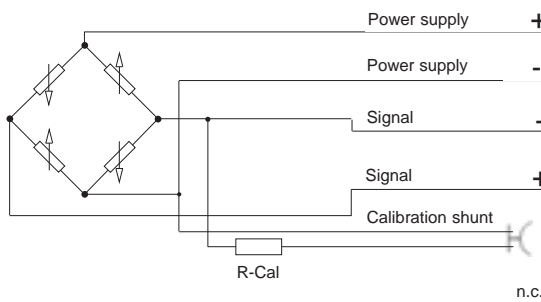

Code V	Code P	Code F	Code E/M
C	1	White	3
D	2	Green	$\underline{\underline{\text{---}}}$
B	4	Black	2
A	3	Red	1
E - F	5 - 6	Blue/Orange	Not available
	7		


Cable shield connected to transducer body

V - 6-pole connector

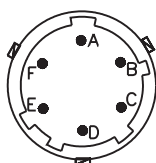


Male connector
VPT02A10-6PT2

P - 7-pole connector

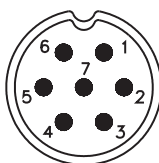


Male connector
09-0127-09-07

F - 6-pole cable

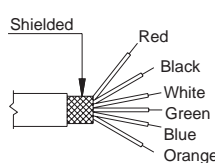

F - Shielded cable 6 x 0,25 - 1m.


**E - 4-pole solenoid connector
M - 4-pole microsolenoid connector**

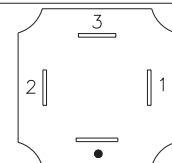


E - Solenoid 400DIN
46350A-ISO 4400
M - Microsolenoid 400 DIN
46350B-ISO 4400

5. Protection for outdoor installations of analog sensors

**Pressure / Analog Melt current output
CAL signals if any do not require protection**

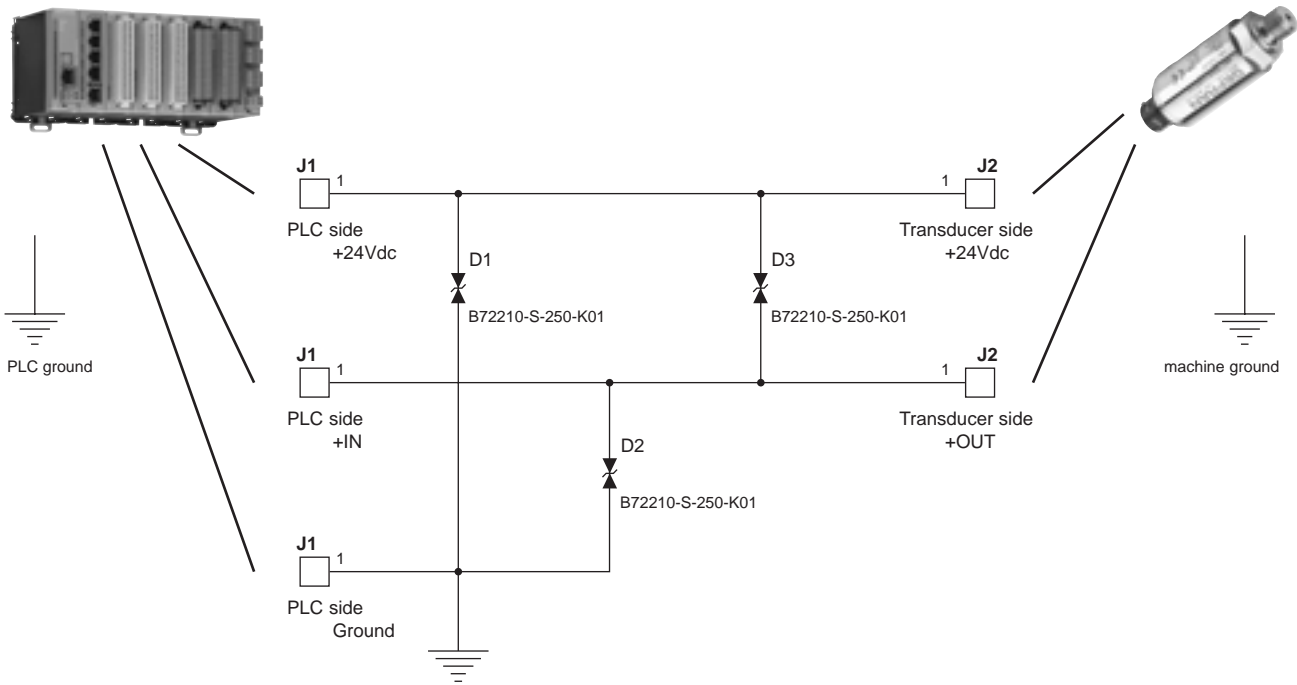

**Pressure / Analog Melt voltage output
CAL signals if any do not require protection**

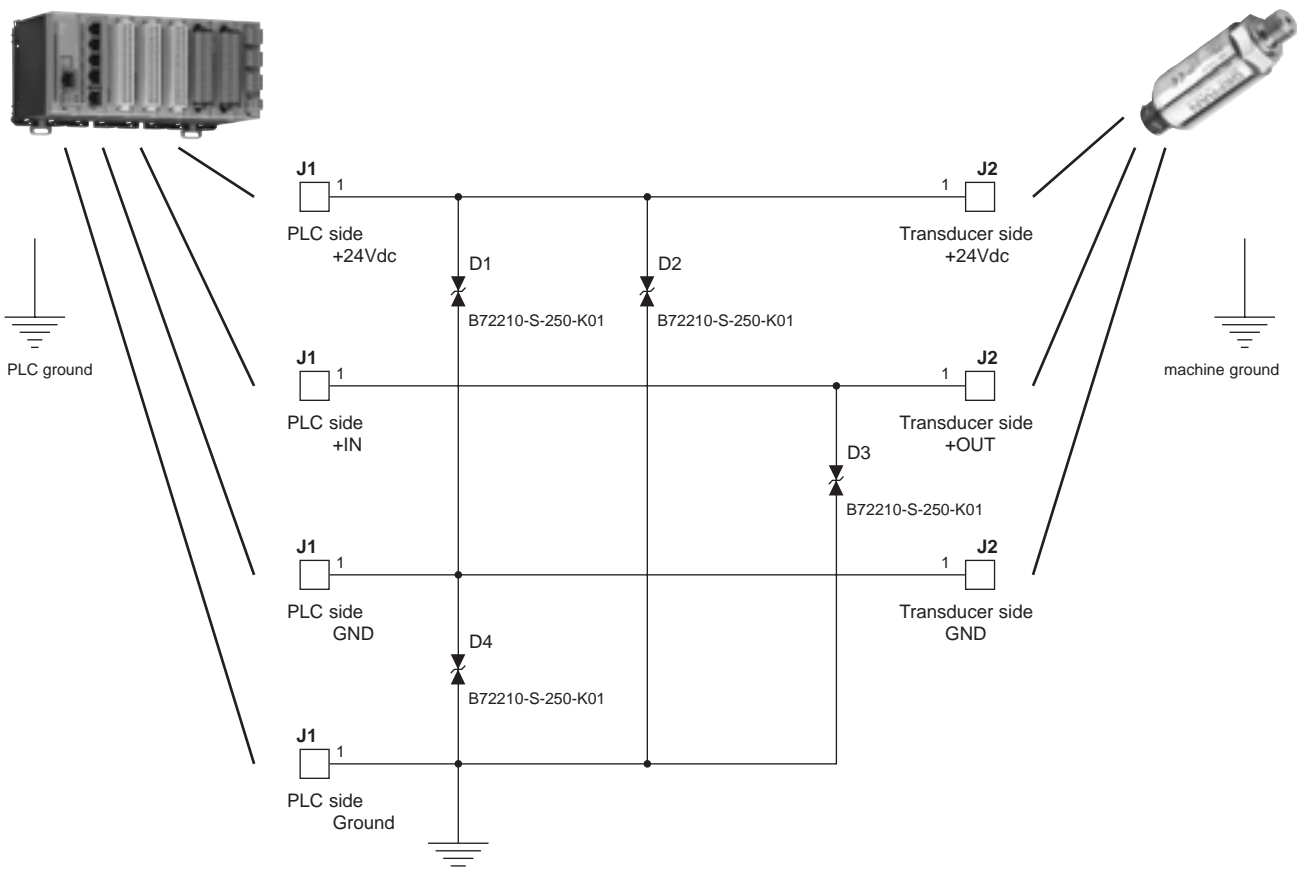

6. Standard reference

Gefran products, described in this manual, are compliant to the European Directive 2004/108/CE.

They are tested according to the standard EN 61326-1 "Electrical equipment for measurement, control and laboratory use - EMC requirements", Part 1 "general requirements and EN 61326-2-3 "Electrical equipment for measurement, control and laboratory use - EMC requirements", Part 2-3: Particular requirements - Test configuration, operational conditions and performance criteria for transducers with integrated or remote signal conditioning.

Electromagnetic Compatibility (EMC) requirements are classified in two types: Emission requirements, Immunity requirements

Emission requirements

For class B equipment the limits, the measuring methods and the provisions given in CISPR11, EN 61000-3-2 and EN 61000-3-3 apply. Equipment classification and choice of respective limits shall be determined after taking into account the intended environment and emission requirement in the areas of use

Immunity requirements

The immunity test requirements are given in table 1.

The tests shall be conducted in accordance with the basic standards. The tests shall be carried out one at a time.

Table 1 - Immunity test requirements for equipment intended for use in industrial locations

Port	Phenomenon	Basic standard	Test value	Performance criteria requested	Performance criteria applied by Gefran
Enclosure	Electrostatic discharge (ESD)	EN 61000-4-2	4 kV / 8 kV contact/air	B	A
	EM field	EN 61000-4-3	10 V/m (80 MHz to 1 GHz) 3 V/m (1,4 GHz to 2 GHz) 1 V/m (2,0 GHz to 2,7 GHz)	A	A
	Rated power frequency magnetic field	EN 61000-4-8	30 A/m	A	A (@ 400 A/m)
Power supply DC ^{a)}	Burst	EN 61000-4-4	2 kV (5/50 ns, 5 kHz)	B	A
	Surge	EN 61000-4-5	1 kV ^{a)} / 2 kV ^{b)}	B	B
	Conducted RF	EN 61000-4-6	3 V (150 kHz to 80 MHz)	A	A (@ 10V)
I/O signal/control (including functional earth lines)	Burst	EN 61000-4-4	1 kV (5/50 ns, 5 kHz) ^{d)}	B	A
	Surge	EN 61000-4-5	1 kV ^{b), c)}	B	B
	Conducted RF	EN 61000-4-6	3 V (10 kHz to 80 MHz)	A	A (@ 10V)

^{a)} Line to line

^{b)} Line to ground

^{c)} Only in the case of long-distance lines

^{d)} Only in the case of lines > 3 m

^{e)} DC connections between parts of equipment/system which are not connected to a d.c. distribution network are treated as I/O signal/control ports

Performance criterion A

During testing, normal performance within the specification limits.

Example

If electronic equipment is required to work with high reliability, the EUT shall operate without any apparent degradation from the manufacturer's specification.

Performance criterion B

During testing, temporary degradation, or loss of function or performance which is selfrecovering.

Example

During testing, an analogue function value may deviate. After the test, the deviation vanishes.

Performance criterion C

During testing, temporary degradation, or loss of function or performance which requires operator intervention or system reset occurs.

Example

In the case of an interruption in the mains longer than the specified buffer time, the power supply unit of the equipment is switched off. The switch-on may be automatic or carried out by the operator.

Copy of the conformity declaration is available for download on the Gefran web site www.gefran.com